


How to send ASCII commands to LOCOSYS GPS module using GPSFox


Step1:

- Install the USB driver of EVK, and GPSFox in your PC.
- Run GPSFox
- Plug EVK in PC USB port and press 「connect to GPS」 icon of GPSFox
- Waits for GPS fix.

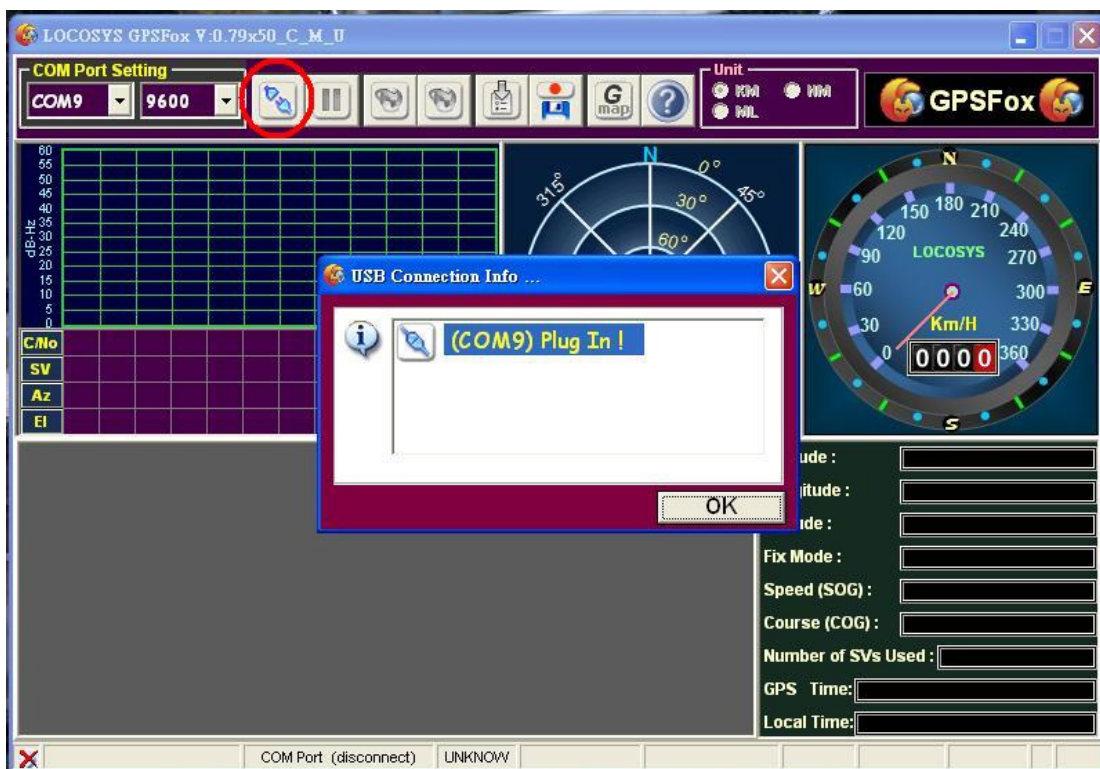


Step2:

- Press 「Ctrl」 and use mouse left button to click 「GPSFox」 logo at the same time.
- The 「Input」 window will popup on screen
- Presses 「OK」 button after keyed in 「commandbox」 at input window

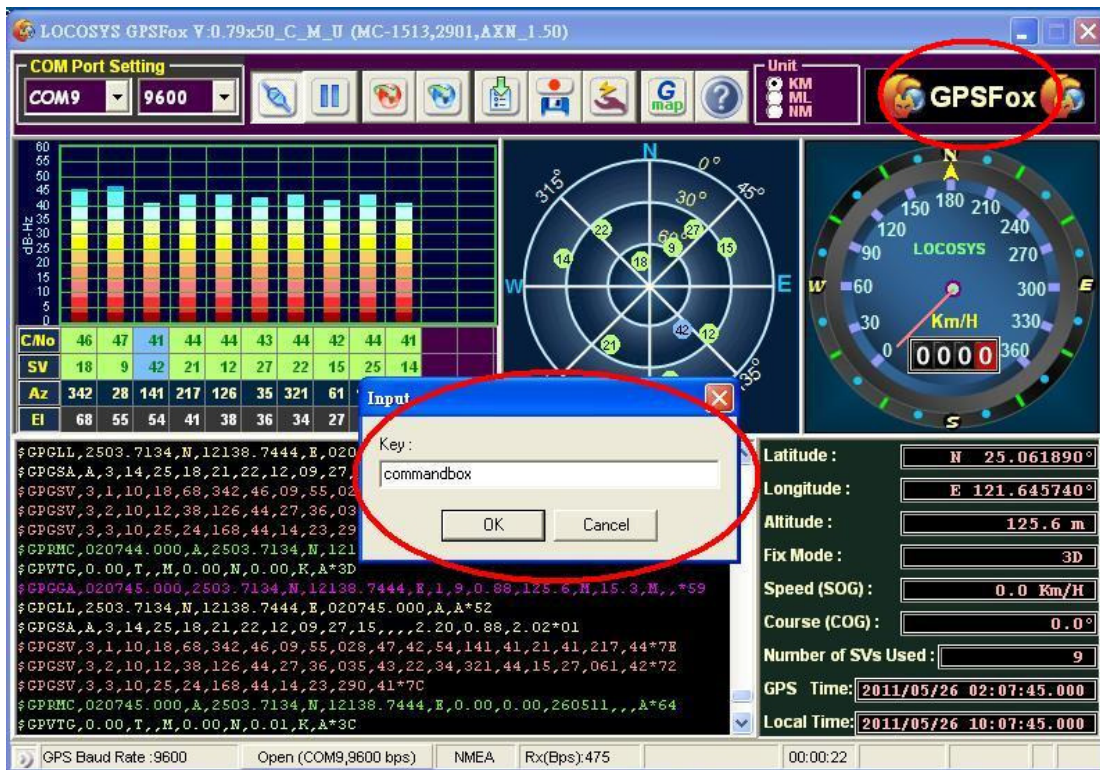


Step3:

→ The 「Command」 bar will appear on the GPSFox

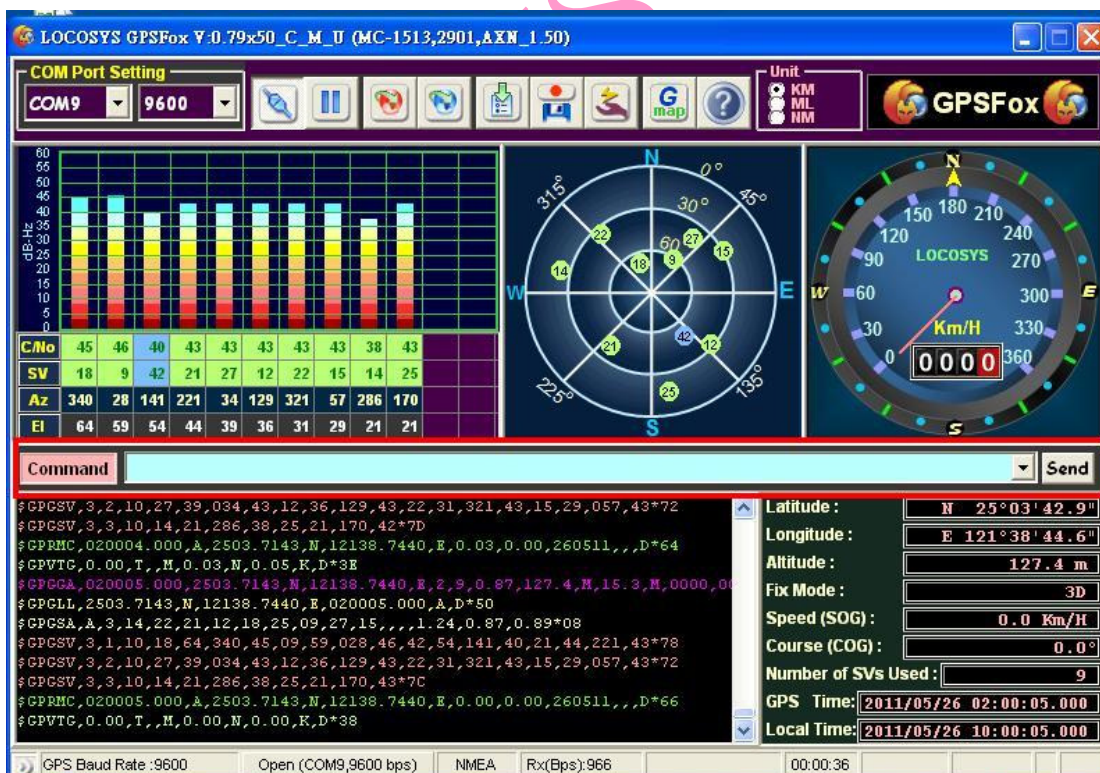

Step 4:

→ key in the ASCII commands and press 「Send」 icon.

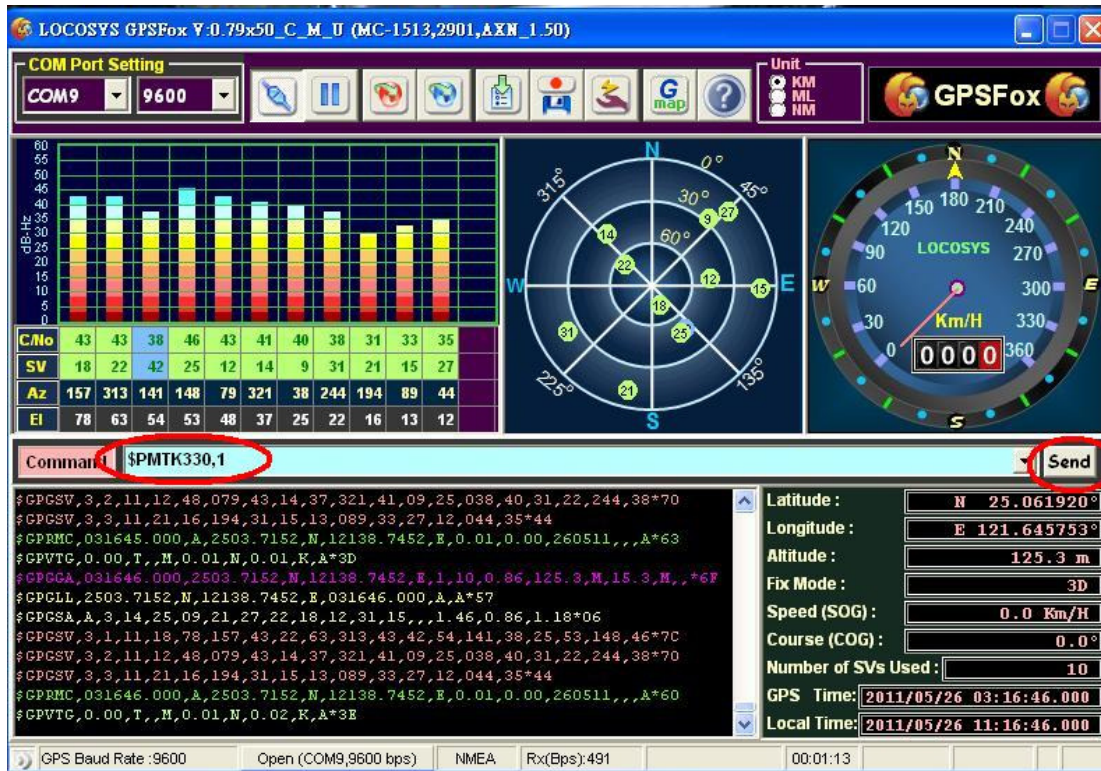

Any ASCII commands do not need to send with CHECKSUM. GPSFox can calculate it automatically.