




LEXUS Navigation System, Radio and Player (Except MARK LEVINSON w/ Navigation System)

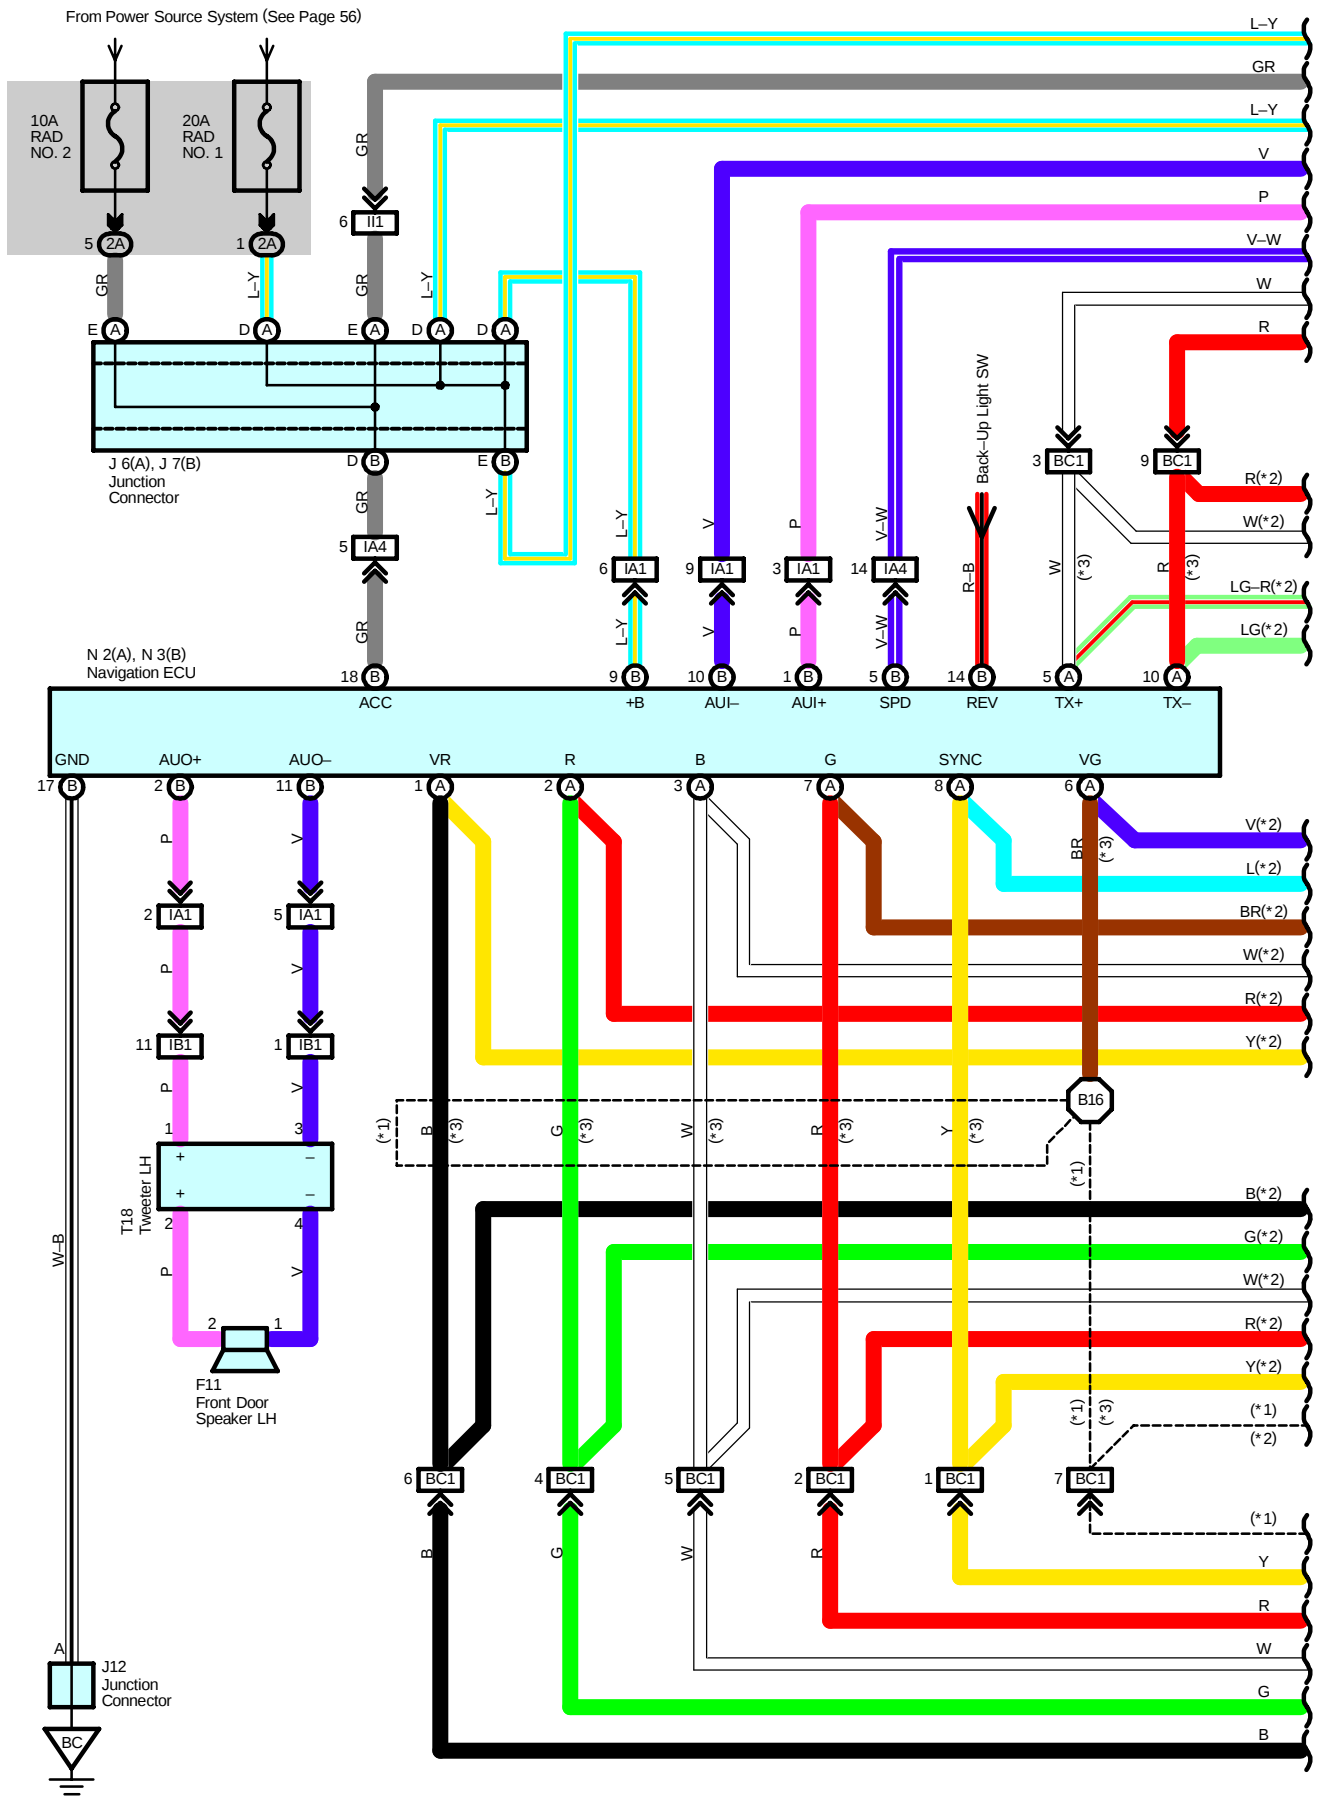


(Except MARK LEVINSON w/ Navigation System)

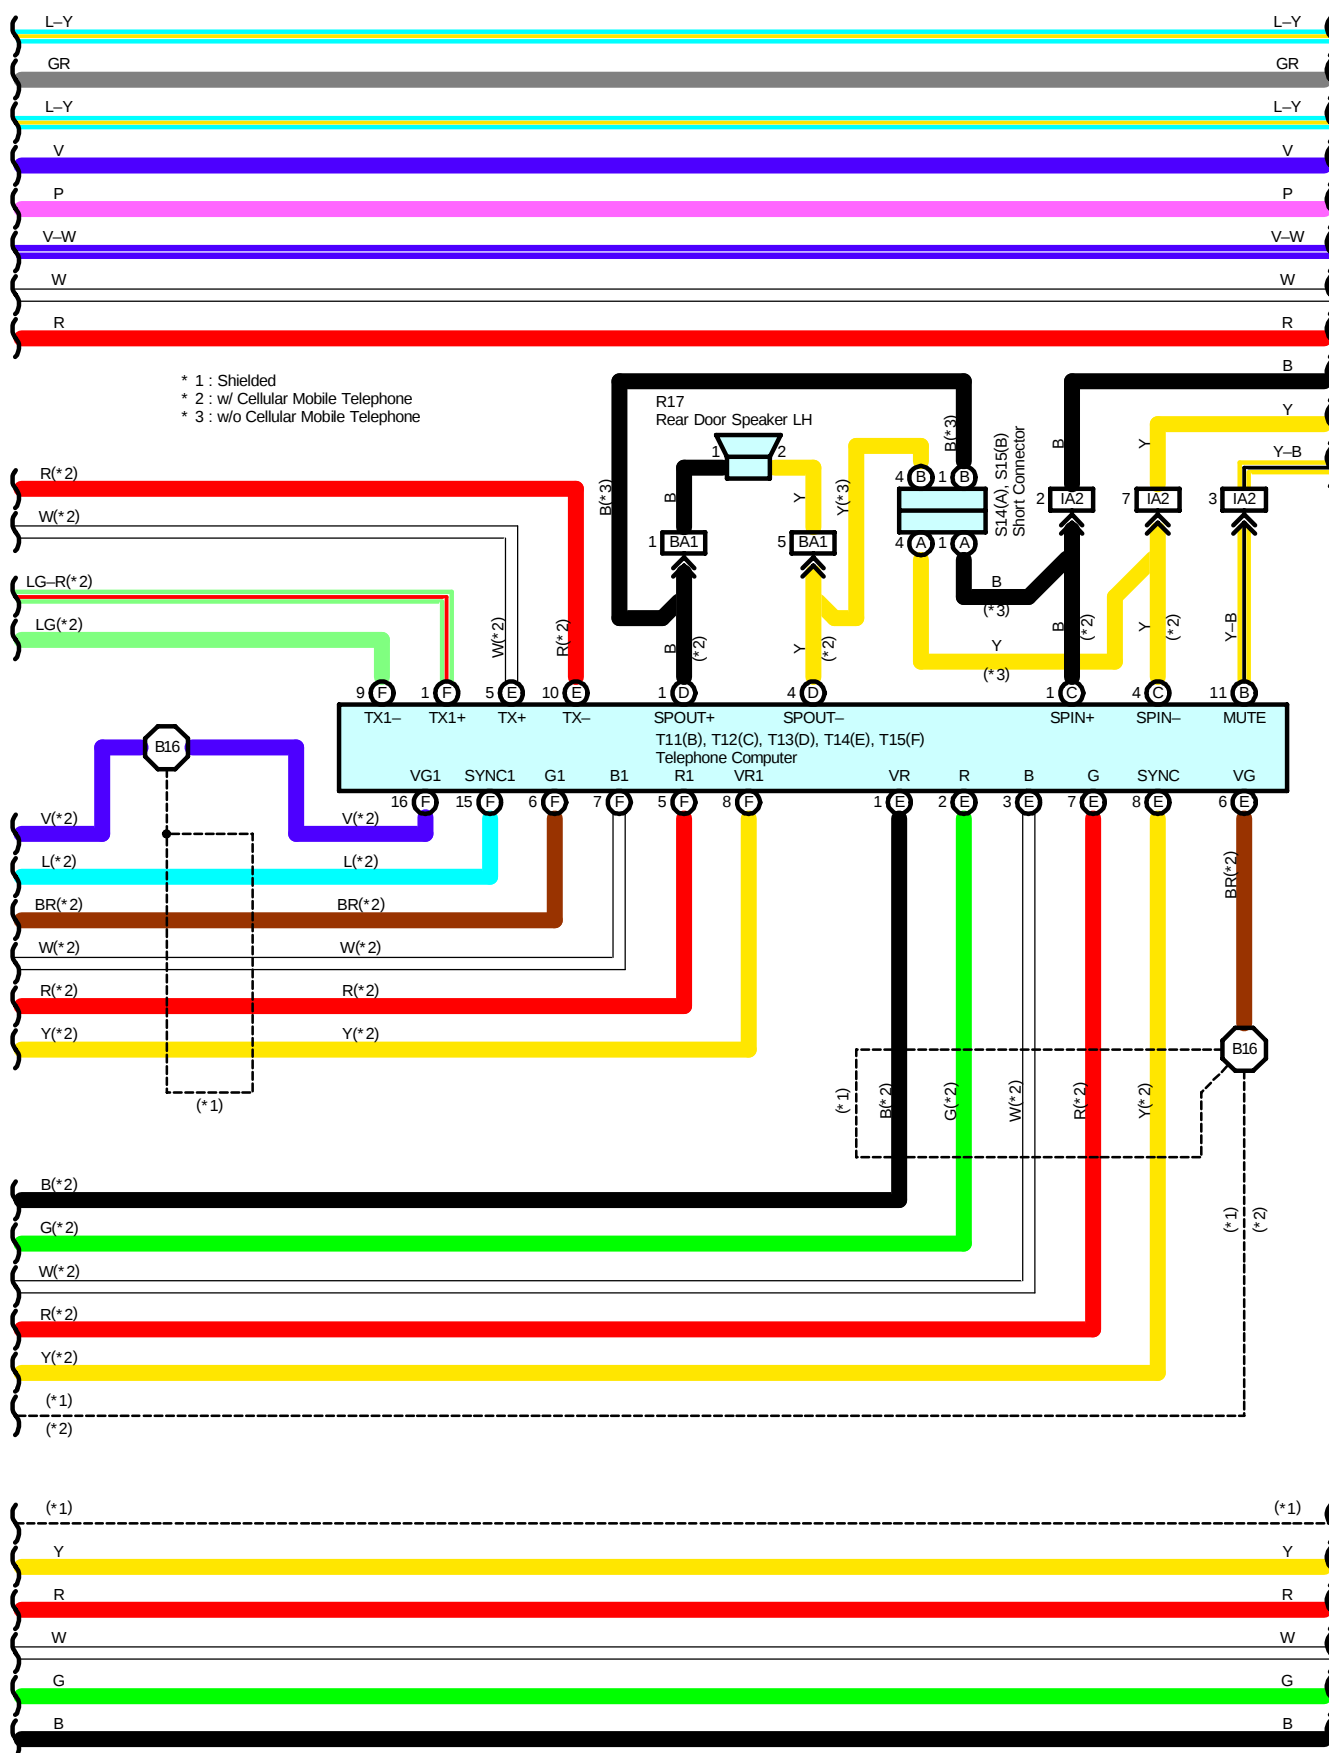


LEXUS Navigation System, Radio and Player

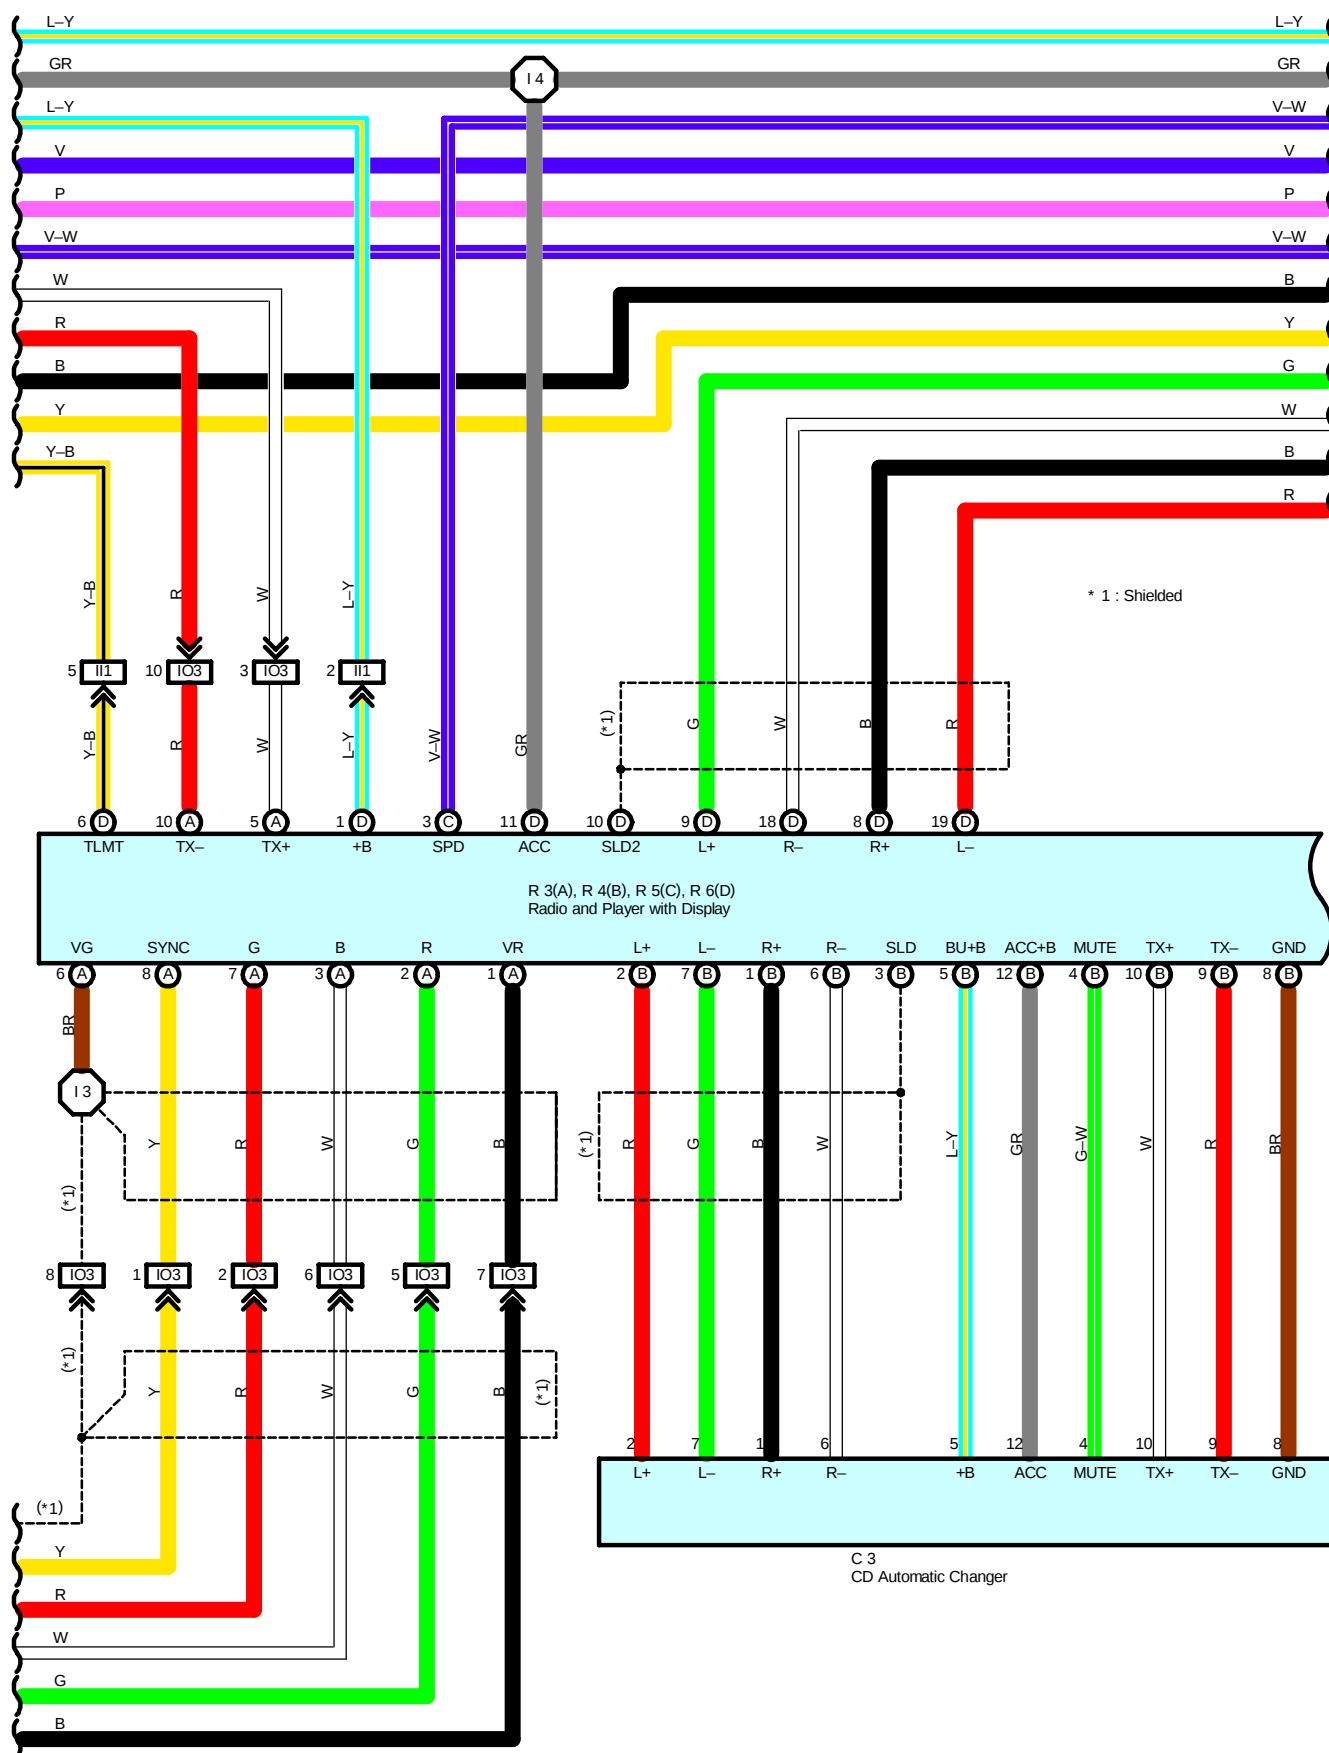

(Except MARK LEVINSON w/ Navigation System)

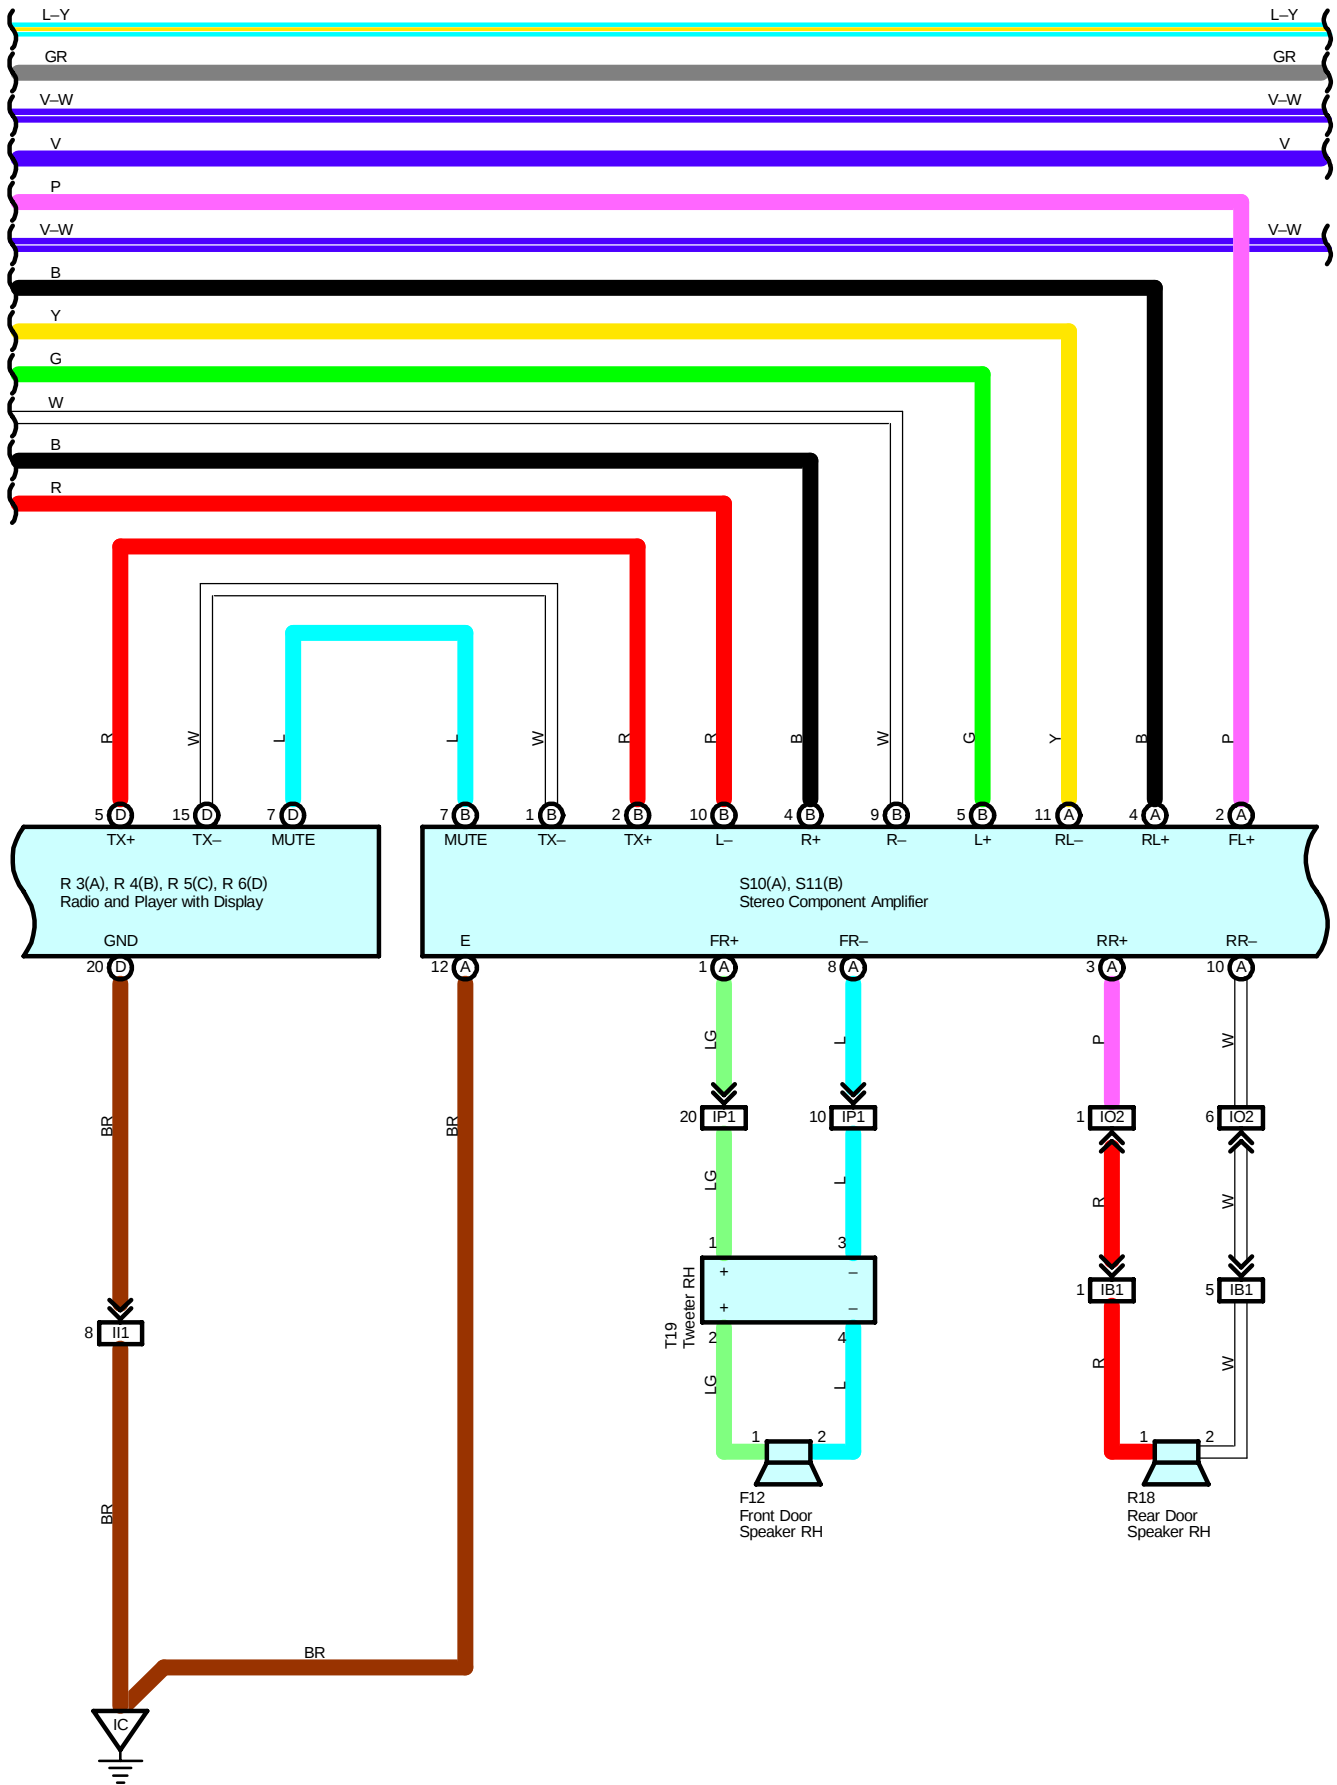

LEXUS Navigation System, Radio and Player

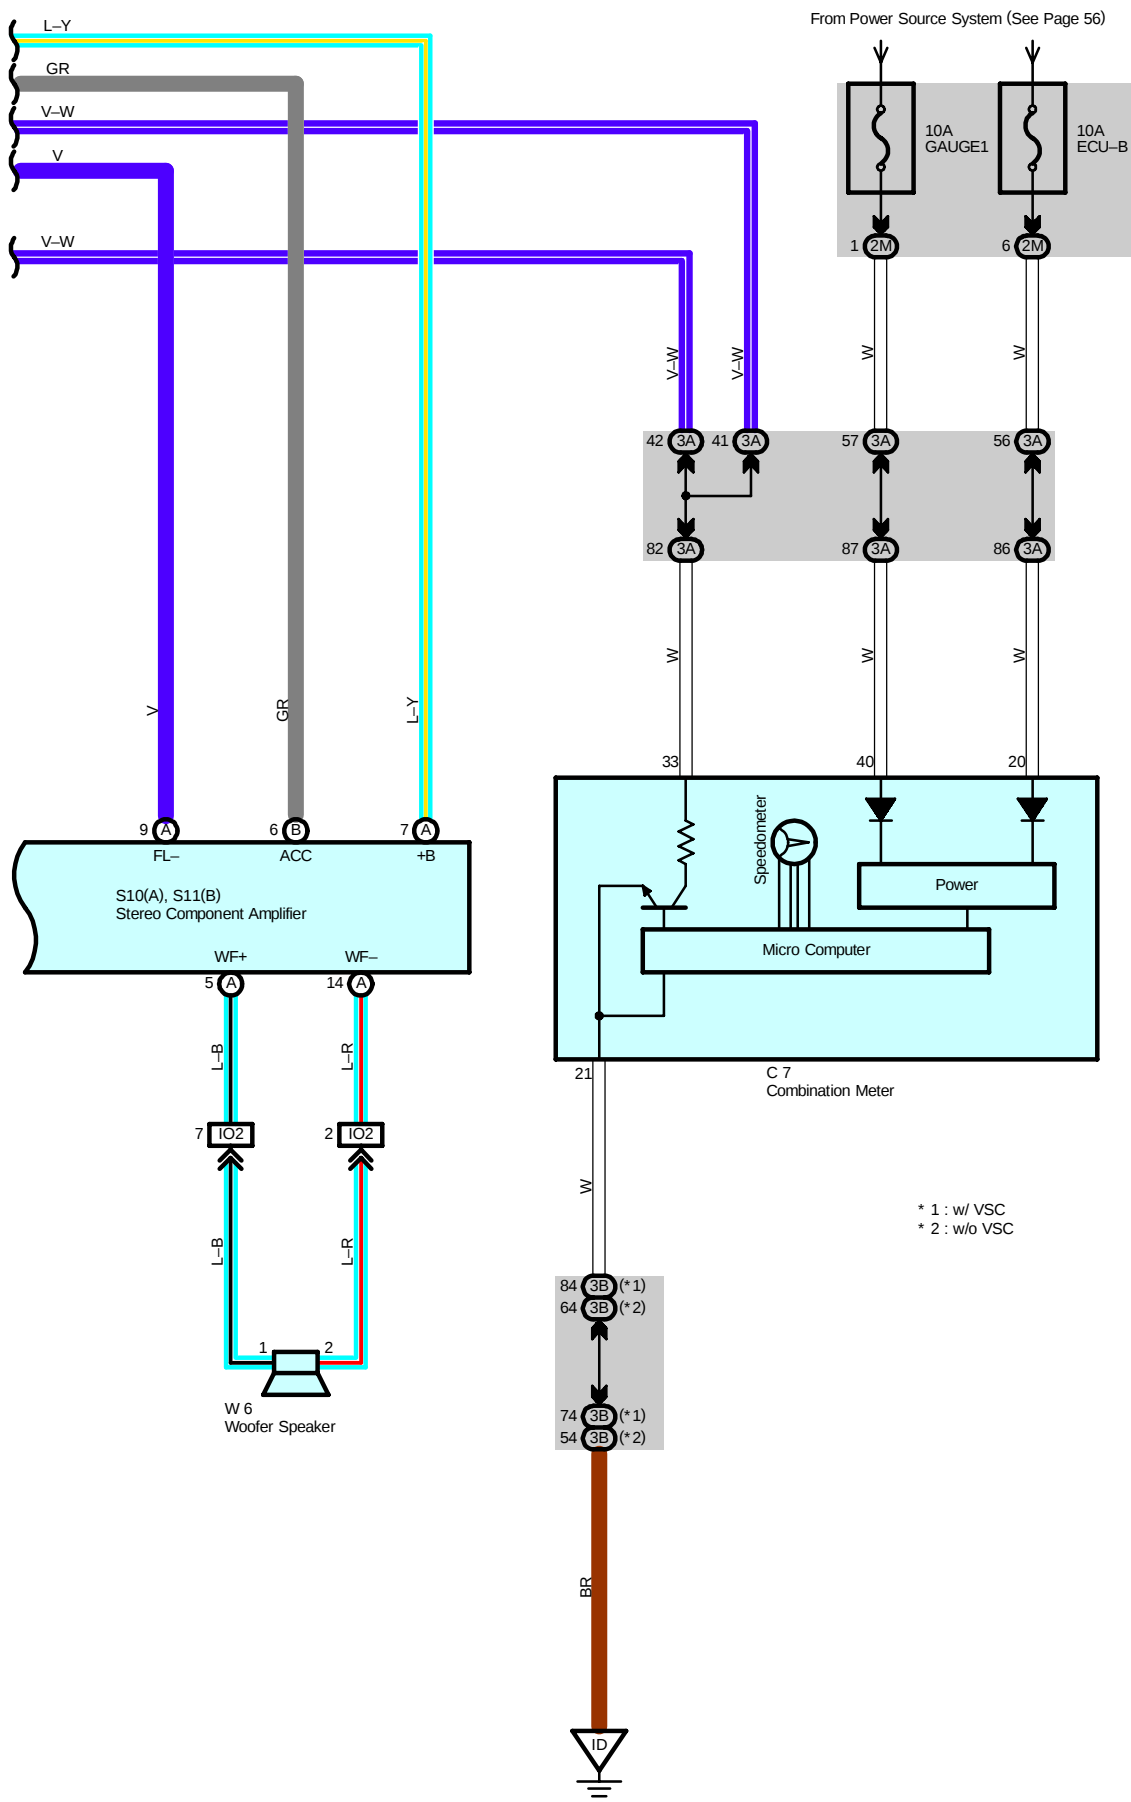

(Except MARK LEVINSON w/ Navigation System)

Service Hints

R6 (D) Radio and Player with Display

- (D) 1–Ground : Always approx. 12 volts
- (D)11–Ground : Approx. 12 volts with ignition SW at ON or ACC position
- (D)20–Ground : Always continuity

N2 (A) Navigation ECU

- (A)18–Ground : Approx. 12 volts with ignition SW at ON or ACC position
- (A) 9–Ground : Always approx. 12 volts
- (A)17–Ground : Always continuity

S10 (A), S11 (B) Stereo Component Amplifier

- (A) 7–Ground : Always approx. 12 volts
- (B) 6–Ground : Approx. 12 volts with ignition SW at ON or ACC position
- (A)12–Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C3	38	R3	A 39	S15	B 41
C7	38	R4	B 39	T11	B 41
F11	40	R5	C 39	T12	C 41
F12	40	R6	D 39	T13	D 41
J6	A 39	R17	41	T14	E 41
J7	B 39	R18	41	T15	F 41
J12	40	S10	A 39	T18	41
N2	A 41	S11	B 39	T19	41
N3	B 41	S14	A 41	W6	41

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2M	29	
3A	34 (w/ VSC) 35 (w/o VSC)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
3B	34 (w/ VSC) 35 (w/o VSC)	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	46	Instrument Panel Wire and Floor No.1 Wire (Left Kick Panel)
IA2		
IA4		
IB1	46	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
II1	48	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the A/C Control Assembly)
IO2	48	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IO3		
IP1	48	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BA1	50	Rear Door No.2 Wire and Floor No.1 Wire (Left Center Pillar)
BC1	50	Floor No.1 Wire and Floor No.2 Wire (Behind the Rear Passenger's Seat RH)

▽ : Ground Points

Code	See Page	Ground Points Location
IC	46	Instrument Panel Brace RH
ID		
BC	50	Front Side of Rear Quarter Wheel House LH

LEXUS Navigation System, Radio and Player (Except MARK LEVINSON w/ LEXUS Navigation System)



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	48	Instrument Panel Wire	B16	50	Floor No.1 Wire
I4	48	Instrument Panel No.3 Wire			