




LEXUS Navigation System, Radio and Player (MARK LEVINSON w/ LEXUS Navigation System)

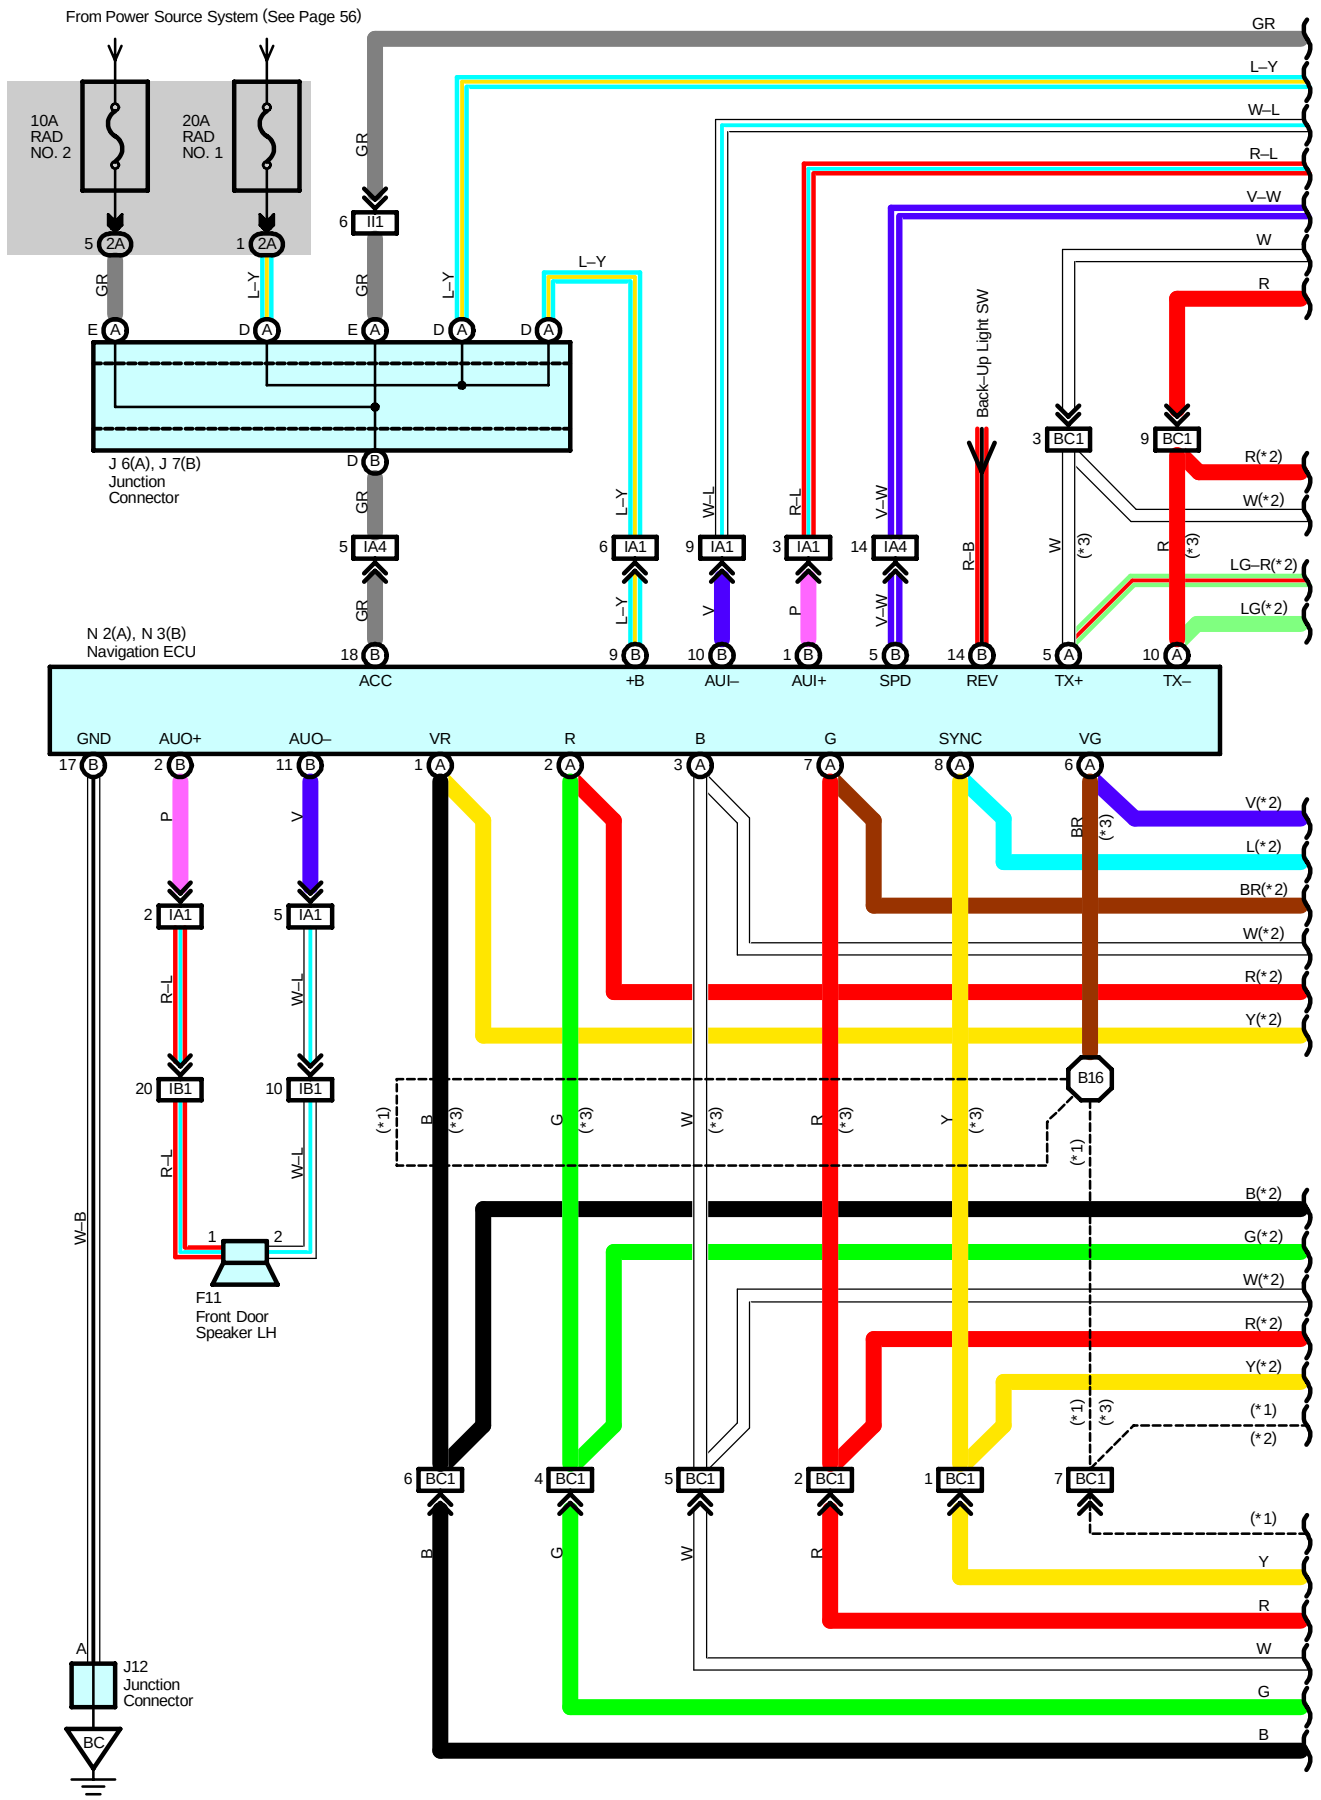


(MARK LEVINSON w/ LEXUS Navigation System)

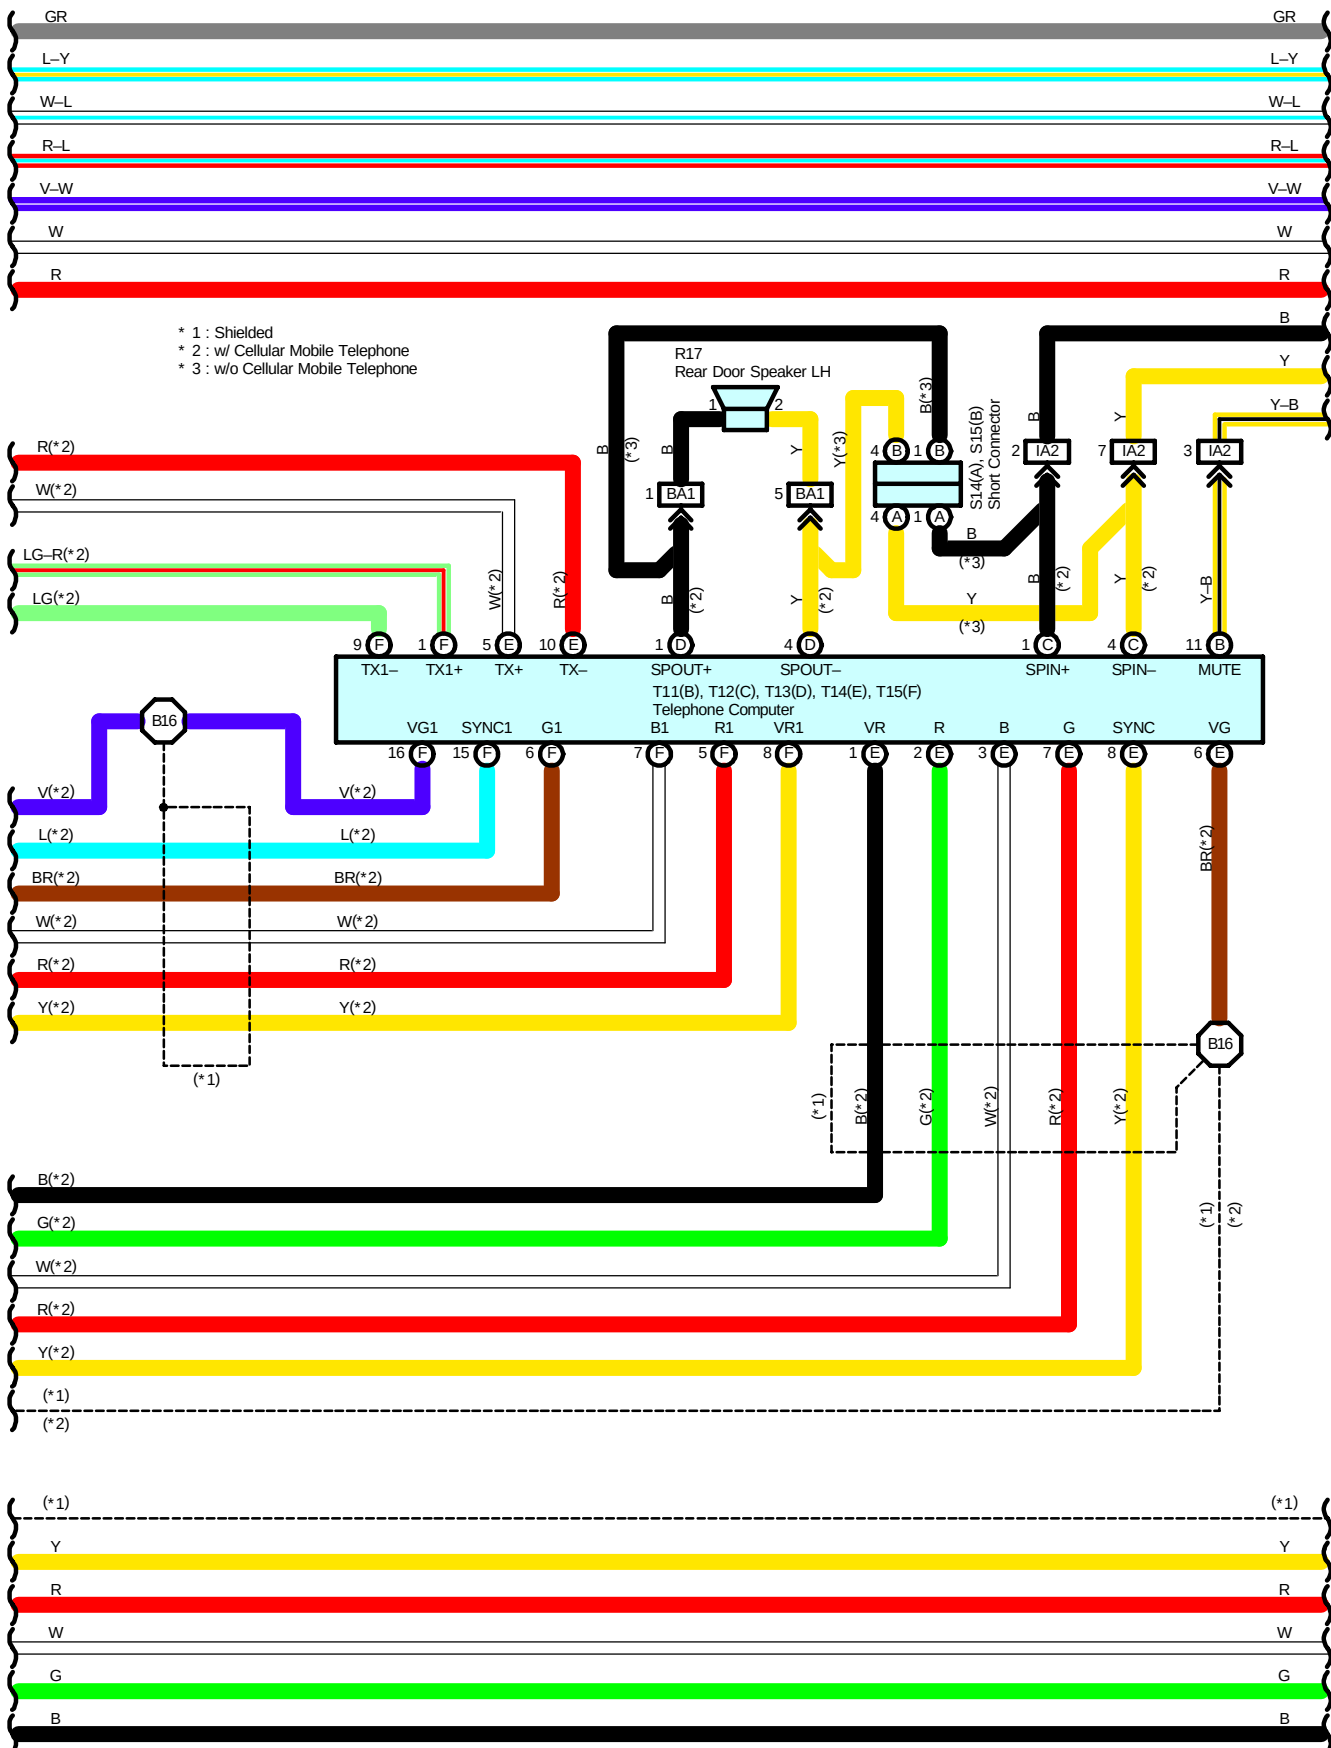


LEXUS Navigation System, Radio and Player

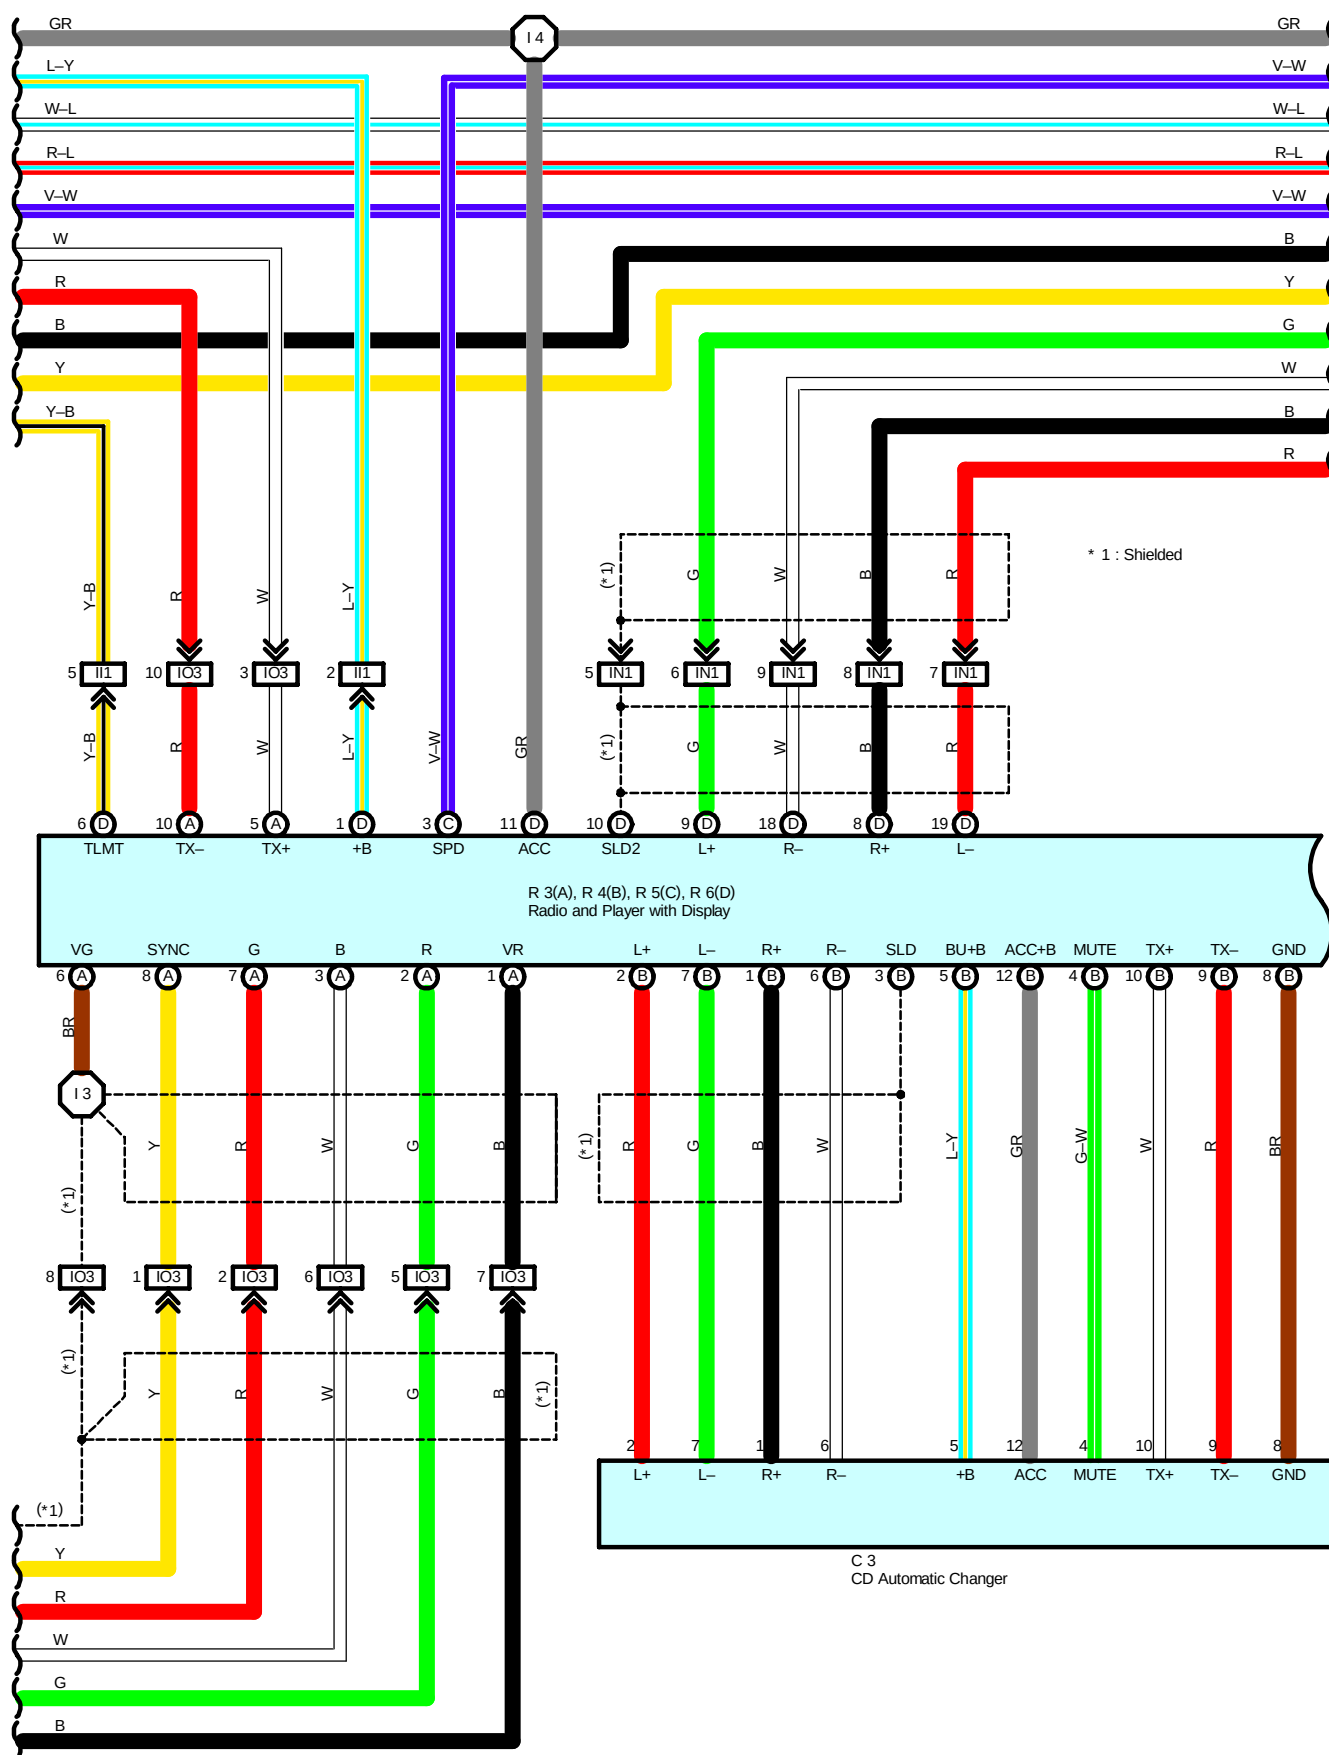

(MARK LEVINSON w/ LEXUS Navigation System)

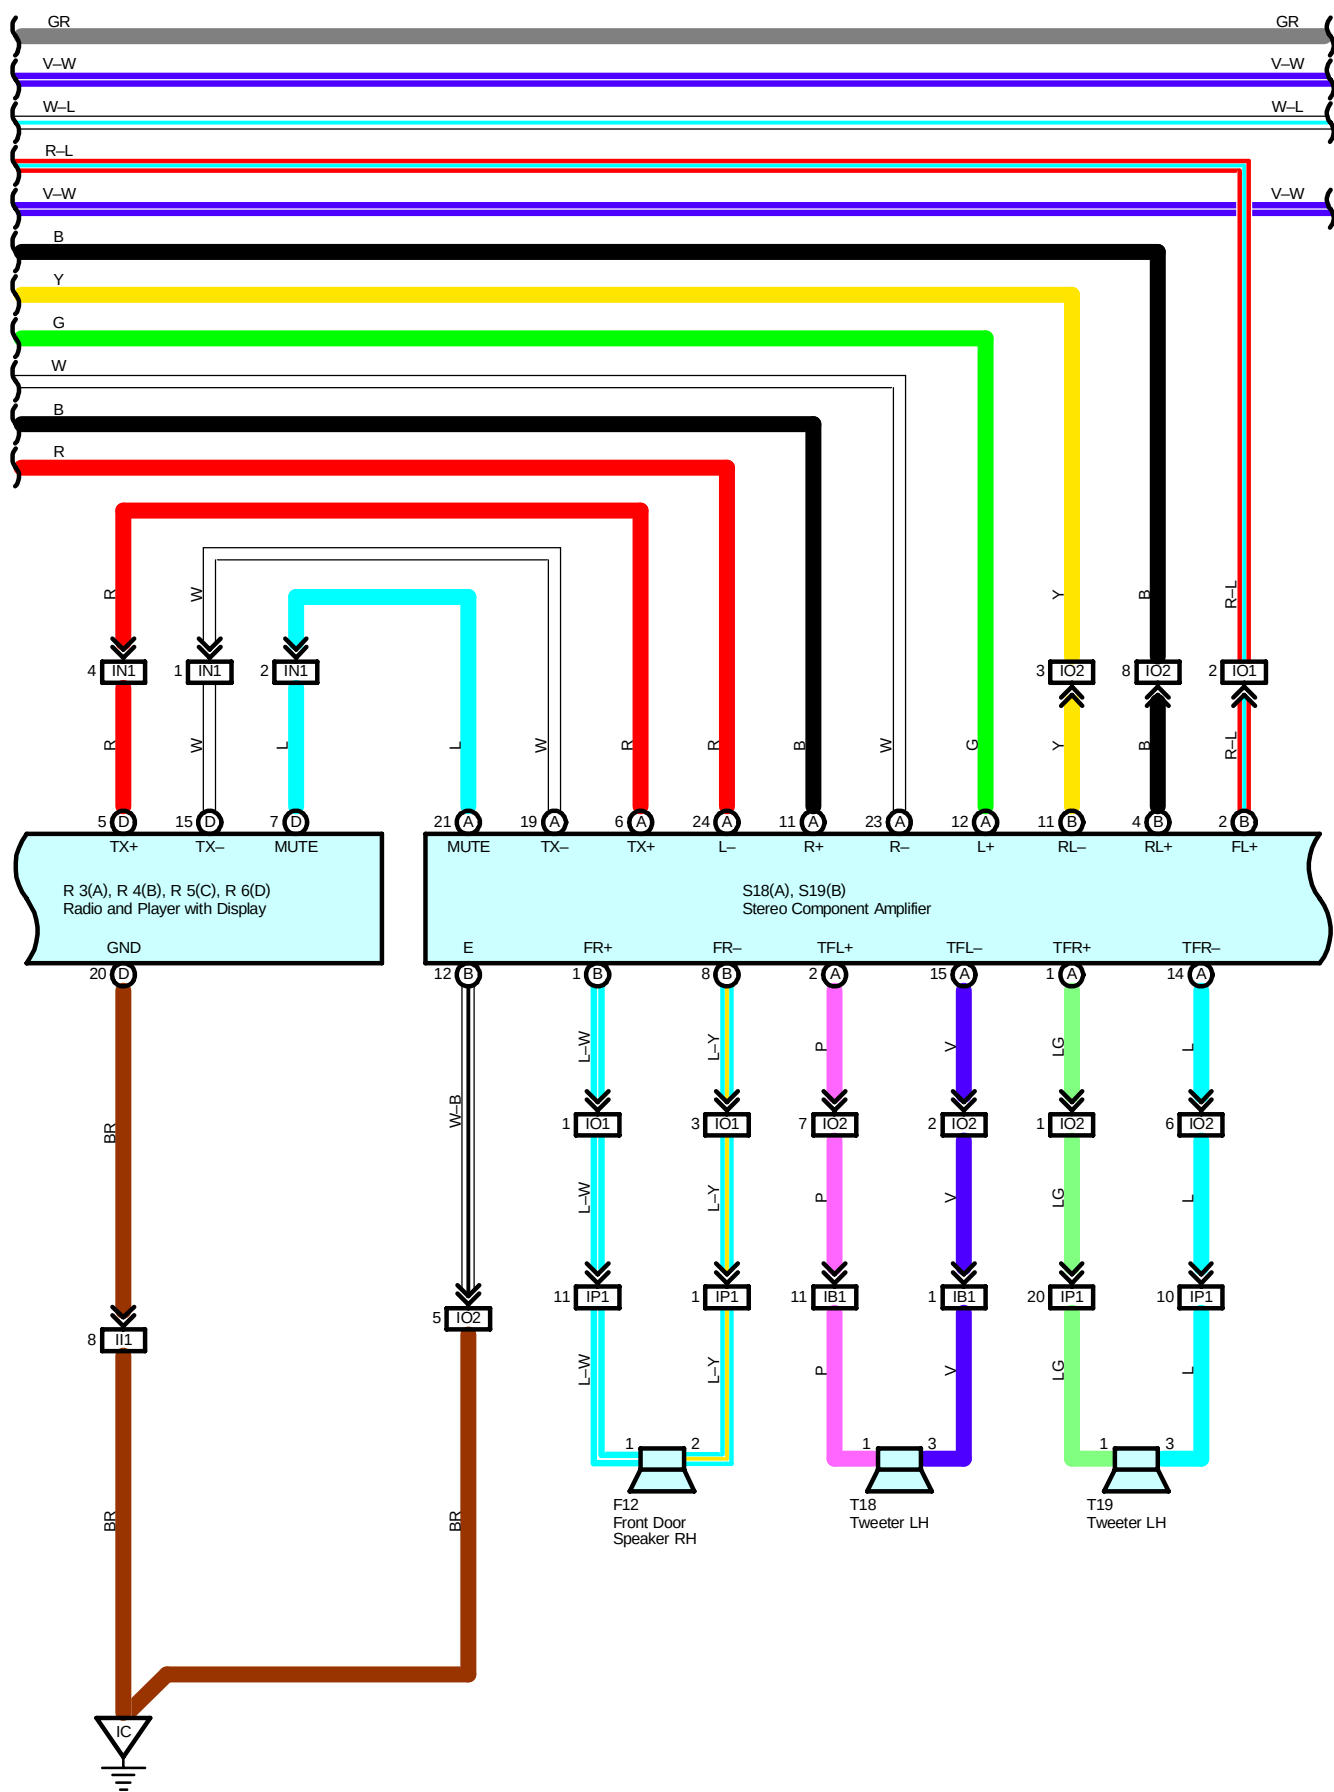

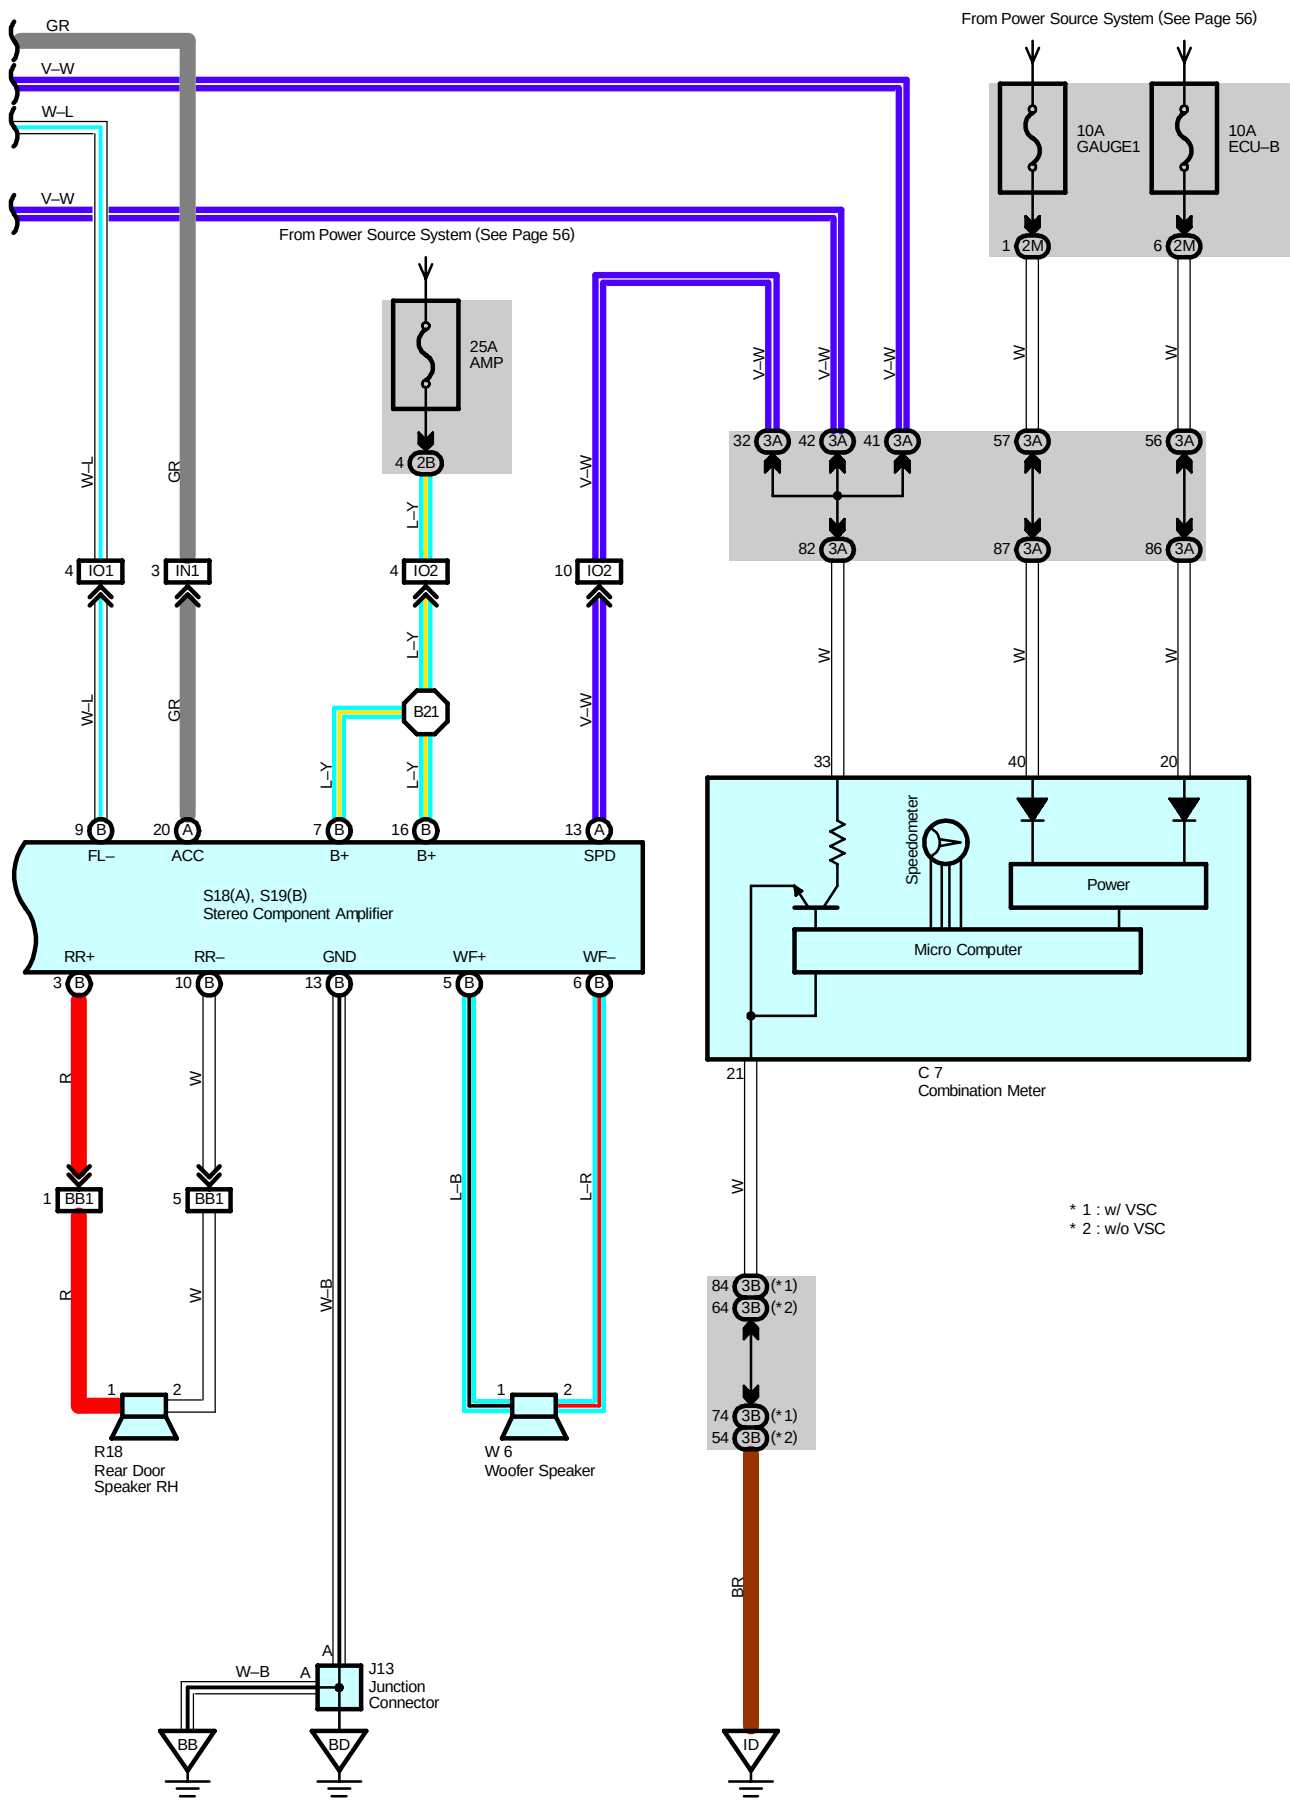

(MARK LEVINSON w/ LEXUS Navigation System)

Service Hints

R6 (D) Radio and Player with Display

- (D) 1–Ground : Always approx. 12 volts
- (D)11–Ground : Approx. 12 volts with ignition SW at ON or ACC position
- (D)20–Ground : Always continuity

N2 (A) Navigation ECU

- (A)18–Ground : Approx. 12 volts with ignition SW at ON or ACC position
- (A) 9–Ground : Always approx. 12 volts
- (A)17–Ground : Always continuity

S18 (A), S19 (B) Stereo Component Amplifier

- (B) 7, (B) 16–Ground : Always approx. 12 volts
- (A) 20–Ground : Approx. 12 volts with ignition SW at ON or ACC position
- (B)12, (B) 13–Ground: Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C3	38	R3	A 39	T11	B 41
C7	38	R4	B 39	T12	C 41
F11	40	R5	C 39	T13	D 41
F12	40	R6	D 39	T14	E 41
J6	A 39	R17	41	T15	F 41
J7	B 39	R18	41	T18	41
J12	40	S14	A 41	T19	41
J13	40	S15	B 41	W6	41
N2	A 41	S18	A 41		
N3	B 41	S19	B 41		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2B		
2M		
3A	34 (w/ VSC) 35 (w/o VSC)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
3B	34 (w/ VSC) 35 (w/o VSC)	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	46	Instrument Panel Wire and Floor No.1 Wire (Left Kick Panel)
IA2		
IA4		
IB1	46	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
II1	48	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the A/C Control Assembly)
IN1	48	Instrument Panel No.2 Wire and Floor No.2 Wire (Right Kick Panel)
IO1	48	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IO2		
IO3		
IP1	48	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BA1	50	Rear Door No.2 Wire and Floor No.1 Wire (Left Center Pillar)
BB1	50	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)
BC1	50	Floor No.1 Wire and Floor No.2 Wire (Behind the Rear Passenger's Seat RH)

LEXUS Navigation System, Radio and Player (MARK LEVINSON w/ LEXUS Navigation System)



: Ground Points

Code	See Page	Ground Points Location
IC	46	Instrument Panel Brace RH
ID		
BB	50	Under the Front Passenger's Seat
BC	50	Front Side of Rear Quarter Wheel House LH
BD	50	Front Side of Rear Quarter Wheel House RH



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	48	Instrument Panel Wire	B16	50	Floor No.1 Wire
I4	48	Instrument Panel No.3 Wire	B21	50	Floor No.2 Wire