


Steering Voice Control Switch Circuit

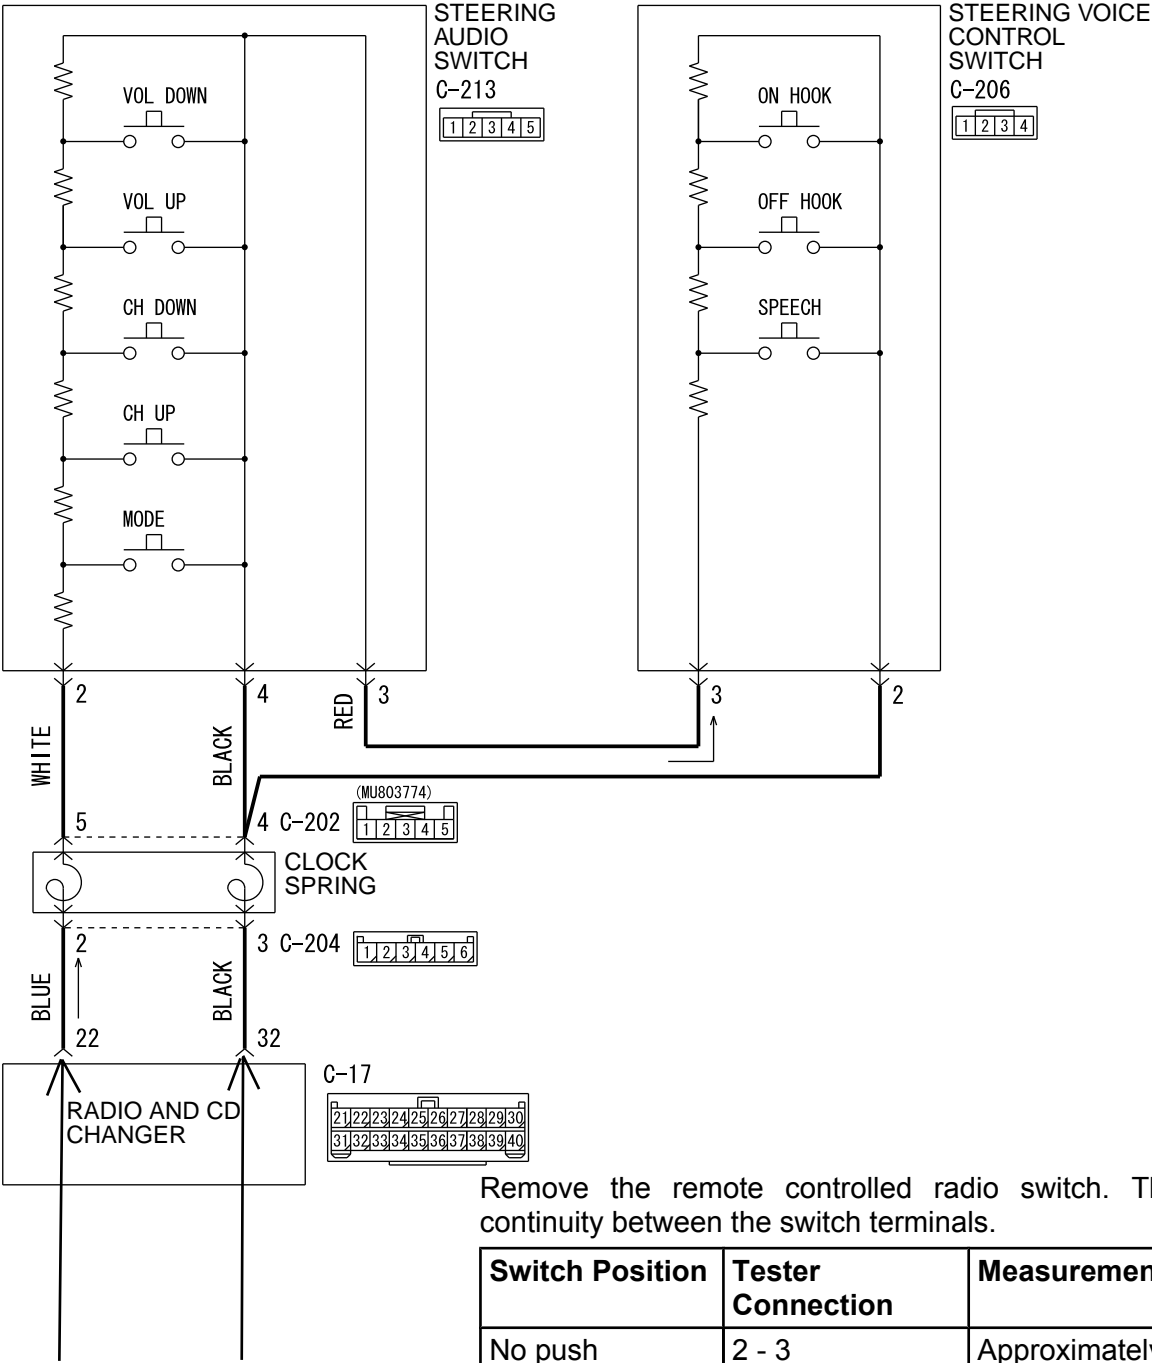

K Arduino

Remove the remote controlled radio switch. Then check continuity between the switch terminals.

Switch Position	Tester Connection	Measurement Value
No push	2 - 3	Approximately 3.1 kΩ
	2 - 4	Approximately 71 kΩ
Mode		Approximately 270 Ω
CH up		Approximately 740 Ω
CH down		Approximately 1.3 kΩ
VOL up		Approximately 2.1 kΩ
VOL down		Approximately 3.1 kΩ

Remove the steering voice-control switch. Then check continuity between the switch terminals.

Switch Position	Tester Connection	Measurement Value
No push	2 - 3	Approximately 74 kΩ
"Speech" switch		Approximately 1.5 kΩ
"Pick-up" switch		Approximately 3.3 kΩ
"Hang-up" switch		Approximately 5.0 kΩ

